



1419 Sam Mason Rd • Bunker Hill, WV 25413  
+1 (877) 799-8665 • [sales@weddletoolco.com](mailto:sales@weddletoolco.com) • [weddletoolco.com](http://weddletoolco.com)

### **Fluid Check Instructions**

If you have any questions or need additional information please contact WTC at 877-79W-TOOL (877-799-8665) or via email at [sales@weddletoolco.com](mailto:sales@weddletoolco.com)

### **Checking Hydraulic Fluid Level**

- In the stored position stand the W Tool on the base plate with the power head on “Top” and the rubber fluid fill plug on the power head visible (Figure 1).
- Gently remove the Rubber Fill Plug with a blade screwdriver.
- While holding a cloth under the fill port on the power head gently lean the W Tool forward while checking for the fluid level to be at or near the top of the fill port. No visible hydraulic fluid during this inspection indicates a “Low” fluid condition.

### **Adding Hydraulic Fluid**

- Add Fluid using Hydraulic Jack Oil available at most auto parts retailers.
- While holding a cloth under the fill port on the power head “SLOWLY” add hydraulic fluid directly into the fill port.
- Fill the power head to the point that the fluid is just visible or just starts run back out of the fill port.
- Clean any surplus fluid from around the fill port.
- Clean and replace the rubber fill plug.
- Check the W Tool for proper operation and “Back Flush” the Power Head. Inspect and clean the W Tool of any excess or spilled fluid.



Figure 1